

How to adjust the focus for outdoor camera

- 1) Hold the camera's body by one hand. (Picture 1)



Picture 1

- 2) Take off the glass shell of the camera. (Picture 2)



Picture 2

3) Take off the phomi around the lens carefully. (Picture 3 & Picture4)



Picture 3



Picture 4

- 4) Take off the two screws of on the IR lights board and take off the lights board as [Picture 5](#) & [Picture 6](#).



Picture 5



Picture 6

- 5) There is a screw which used to fix the lens, use a screw-driver loosen the screw a little bit and you can screw the lens to adjust focus.



Picture 7

- 6) Choose an object around 2m, the lens should face it and rotate the lens till you see the images clear enough.



Picture 8

- 7) After you adjust the focus successfully, please install all the parts back for the camera.